

EN Instruction manual

NL Gebruiksaanwijzing

FR Mode d'emploi

DE Bedienungsanleitung

ES Manual de usuario

PT Manual de utilizador

IT Manuale utente

SV Bruksanvisning

PL Instrukcja obsługi

CS Návod na použití

SK Návod na použitie

RU Руководство по эксплуатации



Mini Table Chef | Table Chef Pro | Table Chef XXL


01.102214.01.750 | 01.102215.01.750 | 01.102216.01.750

PARTS DESCRIPTION / ONDERDELENBESCHRIJVING / DESCRIPTION DES PIÈCES
/ TEILEBESCHREIBUNG / DESCRIPCIÓN DE LAS PIEZAS / DESCRIÇÃO DOS
COMPONENTES / DESCRIZIONE DELLE PARTI / BESKRIVNING AV DELAR /
OPIS CZĘŚCI / POPIS SOUČÁSTÍ / POPIS SÚČASTÍ / ОПИСАНИЕ ЗАПЧАСТІ


01.102214.01.750



01.102215.01.750

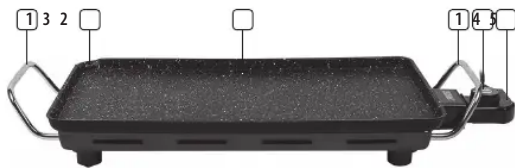

01.102216.01.750

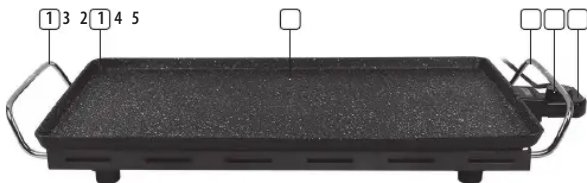

[WEEE Logo]



EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The temperature of accessible surfaces may be high when the appliance is operating.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Only use the appropriate connector for this device.

PARTS DESCRIPTION

1. Handles
2. Baking plate
3. Grease drain
4. Temperature control knob
5. Heat up indicator

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.
- Place a grease collecting tray below the grease drain.
- Place the supplied thermostat in the connection of the thermostat.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)
- Turn the thermostat clockwise to the highest setting and allow the device heating at least 5 minutes without food.
- When the device is turned on for the first time, a slight odour will occur. This is normal, ensure adequate ventilation. This fragrance is only temporary and will disappear soon.
- We advise to place a heat resistant coating between your table and the appliance (this way you don't get burns on your table or table cloth).
- Place the device in a well ventilated space.

USE

- Pre-heat your appliance on the highest level for a few minutes until the temperature indicator goes off.
- The heating plate should be rubbed in with some food oil.
- Use the temperature knob on the thermostat to choose the desired temperature.
- The thermostat regulates a constant temperature. During cooking the indicator light on and off, this is normal, the temperature is always constant adjusted. Never use sharp objects on the grill plate, this will damage the anti-stick coating.

CLEANING AND MAINTENANCE

- Before cleaning, unplug the appliance and wait for the appliance to cool down.

NL Gebru

VEILIGHEID

- [illegible]

ONDERDELENBESC

- ONDERDELENBESCHRIJVING**
1. Handgrepen
 2. Bakplaat
 3. Vetuitloop
 4. Temperatuurknop
 5. Opwarmindicator

VOOR HET EERSTE

- Haal het apparaat uit de beschermfolie of de beschermhoes.
- Veeg voor het eerste gebruik het apparaat af met een vochtige doek.
- Plaats een vetopvangplaat in het apparaat.
- Plaats de bijgeleverde afdekplaat op het apparaat.
- Sluit de voedingskabel aan op de juiste netspanning voor het apparaat.
- aansluit. Voltage 230V.
- Draai de thermostaatknop naar de gewenste temperatuur.
- apparaat minimaal 10 minuten verwarmen.
- Wanneer het apparaat aan staat, zal er een lichte geur afkomen. Dit is normaal. Deze geur is slecht voor de gezondheid.
- Het is aangeraden het apparaat te leggen op een vlakke, droge, warme op uw tafel.
- Plaats het apparaat op een vlakke, droge, warme op uw tafel.

GEBRUIK

- Verwarm uw apparaat totdat de temperatuur 100°C is.
- Smeer de bakplaat met de olie.
- Met de bedieningsknop selecteert u de gewenste temperatuur ingesteld op 100°C.

- Never pour cold water on a hot plate, this could damage the device and can cause splashing hot water.
- Wipe the inside and the edges of the appliance with a paper towel or a soft cloth.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Remove and empty the fat collecting tray after each use and wash the tray in warm, soapy water.
- The table grill is dishwasher safe. However, we recommend to wash the table grill by hand as this will be beneficial for the lifetime of the product.

ENVIRONMENT



■ This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

Support

You can find all available information and spare parts at www.princesshome.eu!



www.princesshome.eu

© Princess 2019

- De thermostaat reguleert de temperatuur van de bakken zal het comfortabel ingestelde temperatuur scherp voorwerpen beschadigen.

REINIGING EN ONDERHOUD

- Verwijder voor reiniging het apparaat is afgekoeld.
- Giet nooit koud water op het apparaat, dit kan beschadigen en op brand leiden.
- Reinig de binnenkant van de afzuigkap met keukenpapier of een zachte doek.
- Reinig het apparaat met een zachte reinigingsmiddel het apparaat.
- Verwijder en leeg de afzuigkap na het koken van warm sop.
- De tafelgrill is vaatwasser veilig. Het is aan te raden de tafelgrill met de hand te wassen voor een goede komst.

MILIEU



■ Dit apparaat kan niet in de normale huisafval worden afgegeven. Het moet worden aangeboden aan een milieupunt voor recycling. Het gebruik van het apparaat kan milieubelastend zijn.

